 


Hello

Welcome to use FAUCETWO.

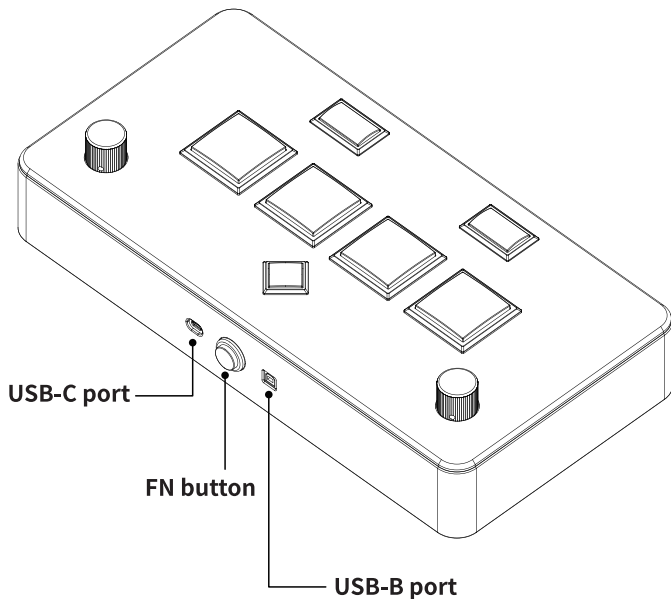


Specification



What's in the box

| | | |
|------------------------|----|-----|
| USB-A to USB-B cable | 1 | pcs |
| USB-A to USB-C cable | 1 | pcs |
| Damping sheet for knob | 10 | pcs |
| Product Manual | 1 | pcs |

Connect to PC

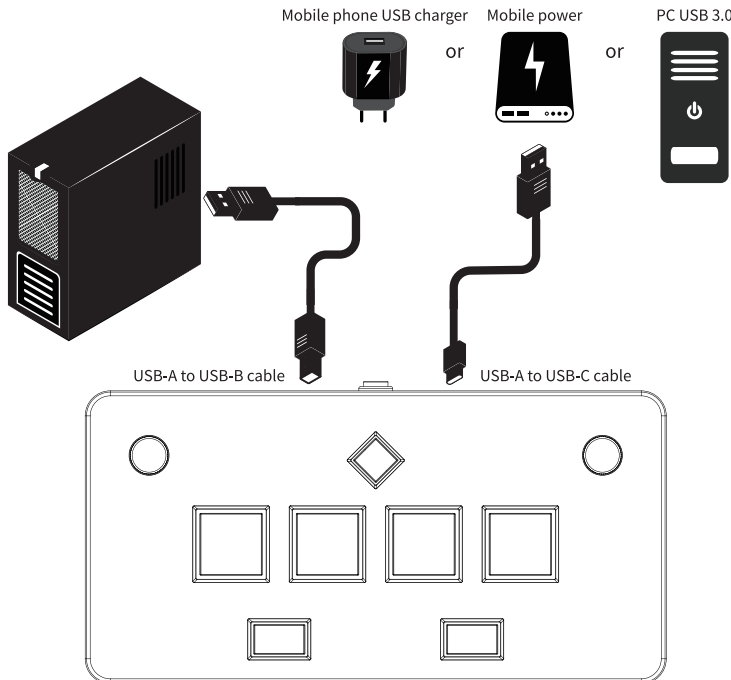

⚠ ATTENTION !!!

- It is not recommended to use USB-Hub. If you must use it, please use an independently powered USB-Hub.
- It is recommended that the USB-B cable be directly connected to the USB interface of the computer's motherboard.
- The other end of the USB-C cable can be connected to any USB-A port (it must provide more than 1A current).
 - Mobile phone charger with USB-A port;
 - Computer USB-A 3.0 port;
 - Mobile power USB-A port;

Some problems when the controller arrived

During transportation, vibration may cause some problem, such as:

- The button LED doesn't light up;
- The button doesn't respond;
- The button cannot be pressed down;
- The button doesn't respond occasionally;

The solution is very simple, please visit support.gamo2.com .

Daily maintenance

Frequent maintenance of FAUCETWO will make it easier to play.

- About 2~3 months, clean the dust and oil stains inside the keys. If your hands are sweaty, decide whether to clean up according to the rebound of the button.
- About 3~4 months, decide whether to replace the damping sheet for knob according to whether the resistance of the damper decreases.
- If you don't use FAUCETWO daily, please protect it so that dust doesn't enter the product. Otherwise, it will seriously affect the feel of the buttons.

ATTENTION for USE ⚠

- The USB-C port is for powering the 3 groups of LED lights. If you don't want to use it, please don't need to connect the USB-C port.
- If use the USB-C port for power supply, please make sure that the USB-A port can provide more than 1A current.
- When performing maintenance, be sure to turn off the power before proceeding.
- If you have a special problem that cannot be solved, please contact us by email, and we will provide a solution as soon as possible.

Tools replace damping sheet for knob


These tools don't come with the product. Please prepare these tools before replacing the damping sheet for knob.




Modes and key combinations

The key combination needs to be pressed simultaneously for 3 seconds. After all the button lights flash, it means the switch is successful.


eAcloud mode (default mode)

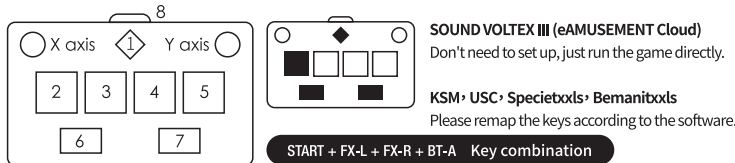


HID joystick mode

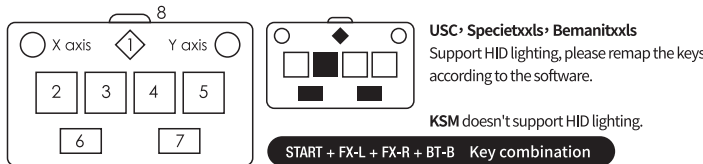

HID keyboard & mouse mode

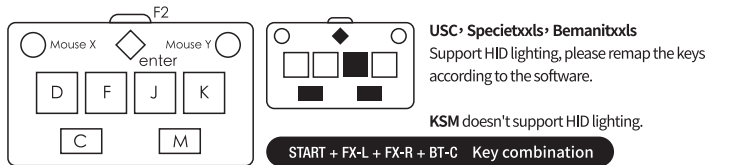


Show current mode

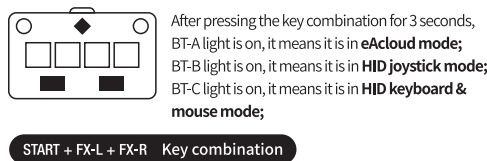


Adjust the trigger distance of the knob


This function is to avoid false triggering (the minimum distance of twisting when the hand touches the knob). **LEVEL 1** means the smallest trigger distance (easiest to trigger by mistake), and **LEVEL 6** means the largest trigger distance (requires the largest initial trigger distance).

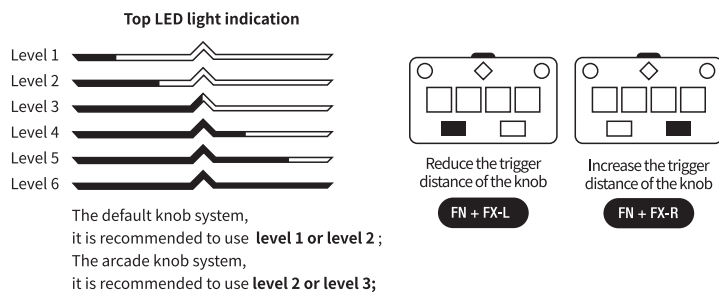

Light adjustment

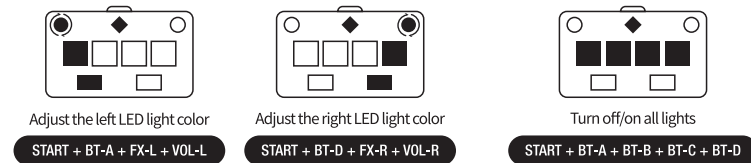

⚠ ATTENTION !!! DO NOT USE THIS FUNCTION

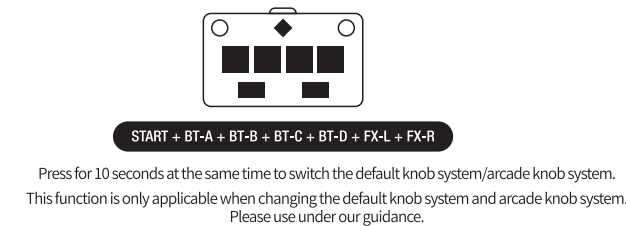

Press for 10 seconds at the same time to switch the default knob system/arcade knob system. This function is only applicable when changing the default knob system and arcade knob system. Please use under our guidance.

Warranty period: 180 days from delivery date

Our company warrant that we will comply with this aftermarket terms, and it doesn't cover the accessories of this product.

- Within 1-7 days, whatever problem happens, our company will provide free maintenance, free replacement, and bear the shipping cost.
- Within 8-30 days, only in the case of normal use, we will provide free maintenance, free replacement. The shipping cost need to be born by the customer.
- Within 31-180 days, we will provide technical support via email, and free maintenance. The cost for replacement and shipping need to be born by the customer.
- If it were beyond 180 days, we only provide technical support via email. The other cost need to be born by the customer.

This warranty doesn't cover following cases, and our company will provide paid maintenance service.

- Doesn't provide order number when asking for maintenance.
- Second-hand products.
- The failure/damage caused by fire, earthquake, flood, public nuisance, lighting strike, salt injury and the other natural disasters.
- The failure/damage caused by dropping or impacting this product during the shipment, movement.
- The failure/damage caused by wrong connection method, or the operation not in accordance with the guide.
- The failure/damage caused by the operation not in accordance with the notices.
- The failure/damage caused by unauthorized modification.

@gamtwo

 
sales@gamo2.com

If you have any questions during use, please contact us via email.

For some tips, please visit support.gamo2.com

If you are not satisfied with the design of this product, have any ideas to improve the product, not satisfied with the after-sales support, and the website design is not satisfied, welcome to contact us by email.

Please email design@gamo2.com. Our design team will communicate directly with you.

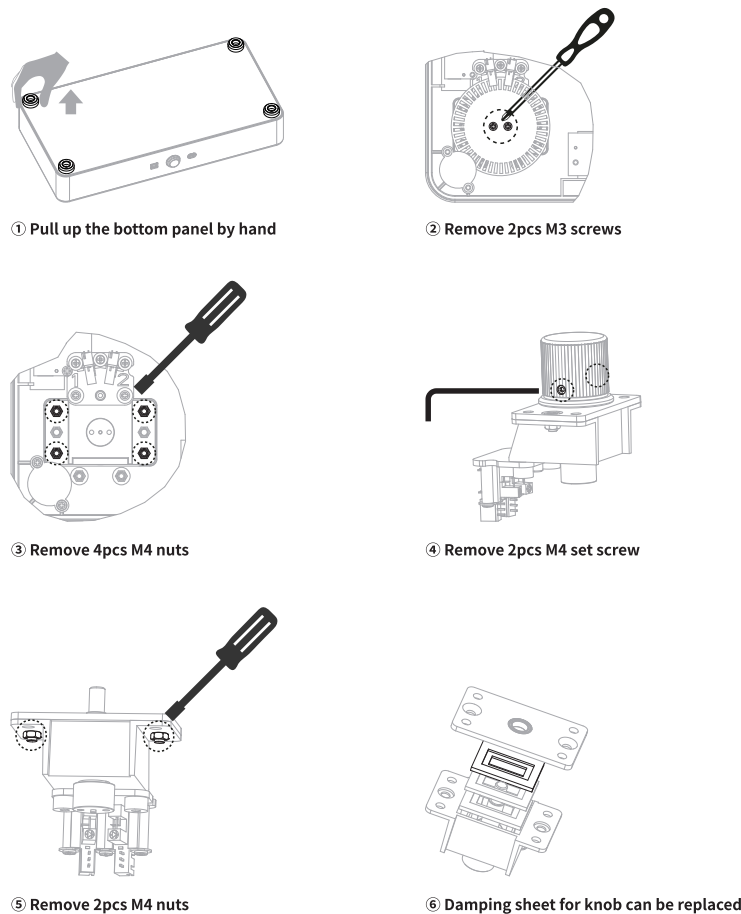

After replacing the damping sheet for knob, follow the disassembly process and install it in the reverse direction. For more detailed tutorials, please visit support.gamo2.com